

### Características Generales de Generación Eléctrica: **Generador Eólico Vertical, VerticalWind**

El Generador Eólico vertical, VerticalWind contiene un sistema de control que trabaja por medio de electroimán.

Transforma el viento en energía con alta potencia.

El VerticalWind ajusta automáticamente su velocidad y dirección.

Su diseño contiene 5 cuchillas de aleación de aluminio y fibra de vidrio reforzada además de ser novedoso, compacto, ligero, mayor duración y mayor estabilidad.

Mayor resistencia a la oxidación.

Facilita su instalación, mantenimiento y reparación.

Funciona con una brisa de viento.

Mayor estabilidad.

Soporta velocidades de hasta 126 Km/h.

Poste se vende por separado, se sugieren postes del

**MXVWD-001** al **MXVWD-014** de 8m hasta 10m de altura dependiendo los vientos.

**MXVWD-015** al **MXVWD-025** de 10m hasta 16m de altura dependiendo los vientos.

**MXVWD-026** al **MXVWD-028** de 16m hasta 20m de altura dependiendo los vientos.

### Aplicaciones de Generación Eléctrica: Generador Eólico Vertical, VerticalWind

El VerticalWind es ideal para zonas industriales, espacios públicos, centros comerciales, ranchos de ganadería, hospitales, escuelas, edificios, restaurantes, hoteles, barcos, oficinas, granjas, haciendas, fincas, huertas, etc.

### Garantía de Generación Eléctrica: Generador Eólico Vertical, VerticalWind

El VerticalWind, cuenta con 1 año de garantía sujeto a cláusulas VentDepot.



Características Técnicas de Generación Eléctrica: Generador Eólico Vertical, VerticalWind

Clave	Potencia del Generador Watts	Voltaje de Salida	Velocidad del Viento		Velocidad Mínima para Funcionamiento		Velocidad Máxima del Vento		Turbina		Temperatura °C	Peso Kg	Dimensiones con Empaque de Cartón en cm		
			m/s	Km/hr	m/s	Km/hr	m/s	Km/hr	Diámetro Ø en m	Altura m			Ancho	Alto	Largo
<b>MXVWD-001</b>	100	12	12	43.2	2	7.2	35	126	0.8	1.0	-40 a 80	21	100	105	100
<b>MXVWD-002</b>	100	24	12	43.2	2	7.2	35	126	0.8	1.0	-40 a 80	21	100	105	100
<b>MXVWD-003</b>	200	12	12	43.2	2	7.2	35	126	1.0	1.2	-40 a 80	28	105	125	105
<b>MXVWD-004</b>	200	24	12	43.2	2	7.2	35	126	1.0	1.2	-40 a 80	28	105	125	105
<b>MXVWD-005</b>	300	12	12	43.2	2	7.2	35	126	1.0	1.3	-40 a 80	30	105	135	105
<b>MXVWD-006</b>	300	24	12	43.2	2	7.2	35	126	1.0	1.3	-40 a 80	30	105	135	105
<b>MXVWD-007</b>	400	12	12	43.2	2	7.2	35	126	1.0	1.4	-40 a 80	32	105	145	105
<b>MXVWD-008</b>	400	24	12	43.2	2	7.2	35	126	1.0	1.4	-40 a 80	32	105	145	105
<b>MXVWD-009</b>	500	12	12	43.2	2	7.2	35	126	1.6	1.8	-40 a 80	40	165	185	165
<b>MXVWD-010</b>	500	24	12	43.2	2	7.2	35	126	1.6	1.8	-40 a 80	40	165	185	165
<b>MXVWD-011</b>	500	48	12	43.2	2	7.2	35	126	1.6	1.8	-40 a 80	40	165	185	165
<b>MXVWD-012</b>	600	12	12	43.2	2	7.2	35	126	1.8	2.0	-40 a 80	50	185	205	185
<b>MXVWD-013</b>	600	24	12	43.2	2	7.2	35	126	1.8	2.0	-40 a 80	50	185	205	185



Clave	Potencia del Generador Watts	Voltaje de Salida	Velocidad del Viento		Velocidad Mínima para Funcionamiento		Velocidad Máxima del Viento		Turbina		Temperatura °C	Peso Kg	Dimensiones con Empaque de Cartón en cm		
			m/s	Km/hr	m/s	Km/hr	m/s	Km/hr	Diámetro Ø en m	Altura m			Ancho	Alto	Largo
MXVWD-014	600	48	12	43.2	2	7.2	35	126	1.8	2.0	-40 a 80	50	185	205	185
MXVWD-015	1000	24	12	43.2	2	7.2	35	126	2.2	2.4	-40 a 80	60	225	245	225
MXVWD-016	1000	48	12	43.2	2	7.2	35	126	2.2	2.4	-40 a 80	60	225	245	225
MXVWD-017	2000	48	12	43.2	2	7.2	35	126	2.3	2.8	-40 a 80	63	235	285	235
MXVWD-018	2000	96	12	43.2	2	7.2	35	126	2.3	2.8	-40 a 80	63	235	285	235
MXVWD-019	3000	48	12	43.2	2	7.2	35	126	2.85	3.0	-40 a 80	75	290	305	290
MXVWD-020	3000	96	12	43.2	2	7.2	35	126	2.85	3.0	-40 a 80	75	290	305	290
MXVWD-021	3000	120	12	43.2	2	7.2	35	126	2.85	3.0	-40 a 80	75	290	305	290
MXVWD-022	3000	220	12	43.2	2	7.2	35	126	2.85	3.0	-40 a 80	75	290	305	290
MXVWD-023	5000	96	12	43.2	2	7.2	35	126	3.6	4.0	-40 a 80	88	365	405	365
MXVWD-024	5000	120	12	43.2	2	7.2	35	126	3.6	4.0	-40 a 80	88	365	405	365
MXVWD-025	5000	220	12	43.2	2	7.2	35	126	3.6	4.0	-40 a 80	88	365	405	365
MXVWD-026	10000	220	12	43.2	2	7.2	35	126	5.8	6.0	-40 a 80	100	585	605	585
MXVWD-027	10000	240	12	43.2	2	7.2	35	126	5.8	6.0	-40 a 80	100	585	605	585
MXVWD-028	10000	380	12	43.2	2	7.2	35	126	5.8	6.0	-40 a 80	100	585	605	585


Dimensiones de Generación Eléctrica: Generador Eólico Vertical, VerticalWind				
Clave	A		B	
	Ø Pulg	Pulg	Ø Pulg	Pulg
MXVWD-001		31.5		39.4
MXVWD-002		31.5		39.4
MXVWD-003		39.4		47.25
MXVWD-004		39.4		47.25
MXVWD-005		39.4		51.19
MXVWD-006		39.4		51.19
MXVWD-007		39.4		55.12
MXVWD-008		39.4		55.12
MXVWD-009		63.0		70.87
MXVWD-010		63.0		70.87
MXVWD-011		63.0		70.87
MXVWD-012		70.9		78.75
MXVWD-013		70.9		78.75
MXVWD-014		70.9		78.75
MXVWD-015		86.7		94.5
MXVWD-016		86.7		94.5
MXVWD-017		90.6		110.24
MXVWD-018		90.6		110.24
MXVWD-019		112.21		118.11
MXVWD-020		112.21		118.11
MXVWD-021		112.21		118.11
MXVWD-022		112.21		118.11
MXVWD-023		141.74		157.48
MXVWD-024		141.74		157.48

### Dimensiones de Generación Eléctrica: Generador Eólico Vertical, VerticalWind

Clave	A	B
	Ø Pulg	Pulg
MXVWD-025	141.74	157.48
MXVWD-026	228.35	236.22
MXVWD-027	228.35	236.22
MXVWD-028	228.35	236.22



### Diagrama de Generación Eléctrica: Generador Eólico Vertical, VerticalWind

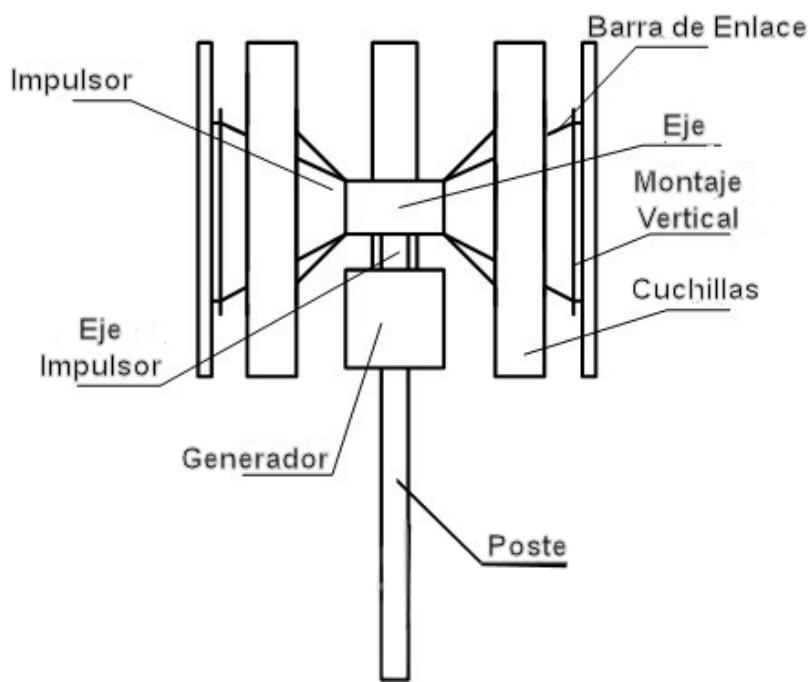

### Sistema On-Grid




### Sistema Off-Grid



### Velocidad Media Global del Viento, VerticalWind

#### Global Mean Wind Speed at 80m

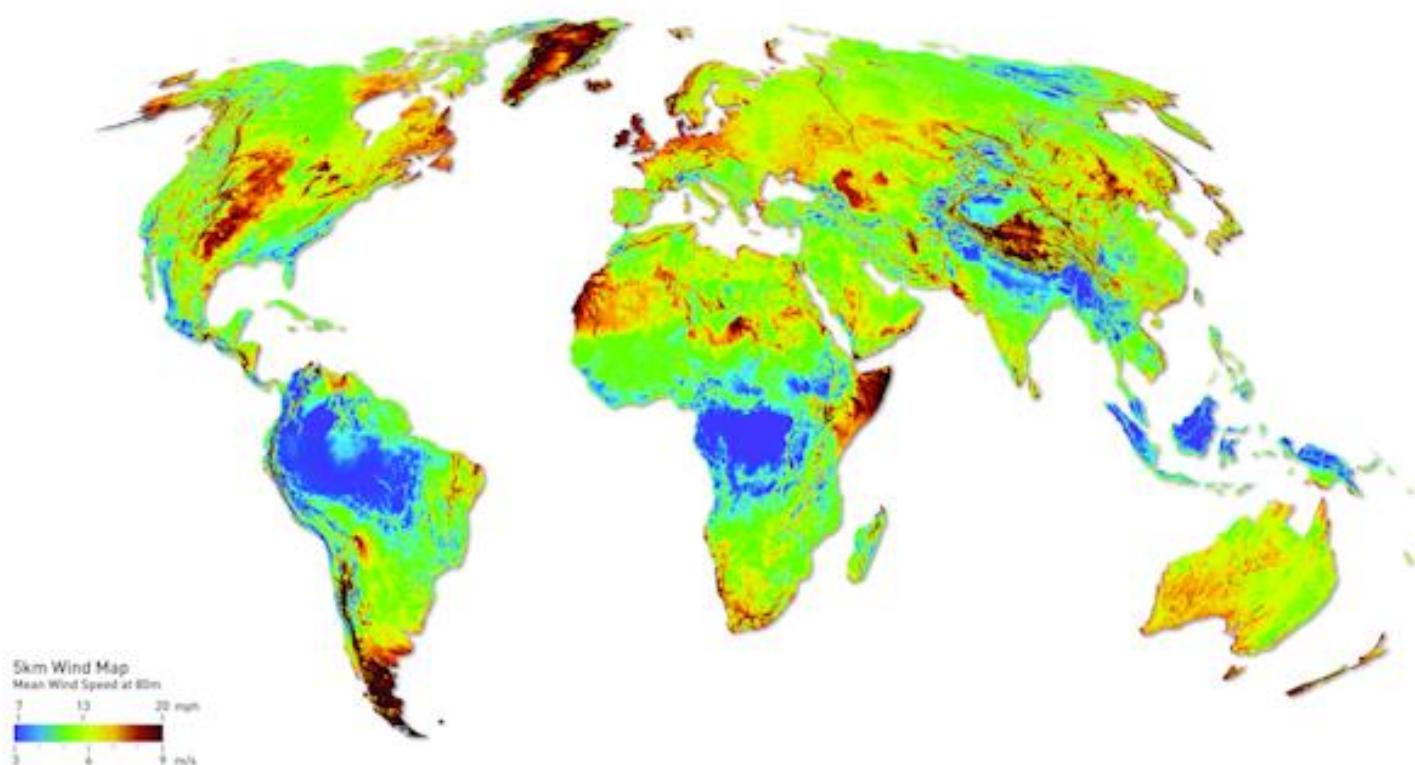


Versión de Corrección	Nombre del Autor	Descripción del Error	Descripción de la Corrección	Vo.Bo. Supervisor
V2	Miguel Juárez		Sé agrega manual de usuario	Jessica Lorenzo





### User Manual

Vertical axis wind generator

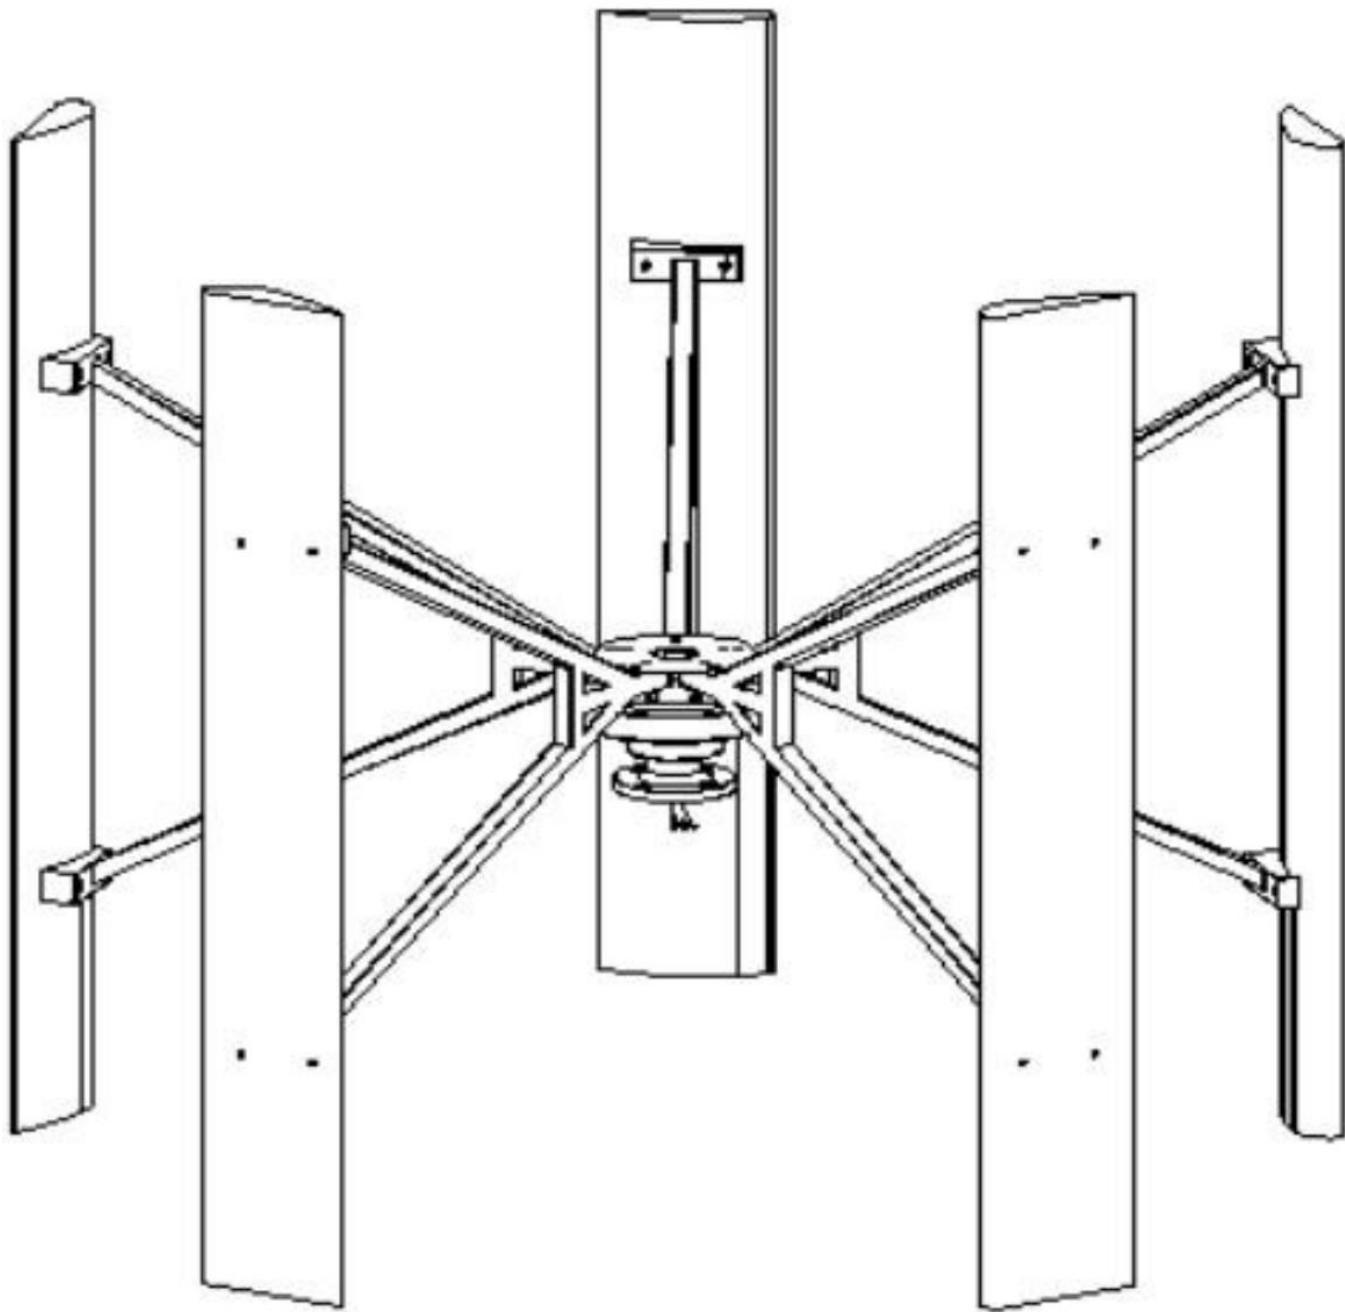

### Content

- 1 Overview
- 2 The installation of VAWT
- 3 The configuration of generating system
- 4 Routine maintenance
- 5 Trouble clearing
- 6 Introduction of VAWT
- 7 Accessory and installation diagram

Thank you for your buying our products----vertical axis wind power generator. Please readthe manual carefully before you operate the new machine. It is not only good to guarantee the products in safe and normal operation, but also (it is) conducive to bring their advantages into full play. We hope the products----vertical axis wind power generator will make you bright and happy.

#### 1. Overview

VAWT H series wind power generating set utilize a new aerofoil vertical axis windwheel and magnetic suspenstion structure, choose high strength glass fiber reinforced plastic and aluminum alloy to make blades. This series VAWT have earned many items of national patent, in the leading position. H series VAWT are widely used in the areas where are good environments for wind energy. It can offer the uninterrupted power supply (UPS) for electrical equipment in areas, where are no electricity. It is suitable for off-grid system and on-grid system.

#### 2. The installation of VAWT

##### i The place (of installation):

The place is very important for generated energy and safe in operation (the reference is below):

A good place should meet with two basic requirements: the higher average windspeed and the weaker turbulence.

( i ) The average wind speed is higher, the generated power is higher and the generator will generate more electricity.(The wind energy is proportional to three cubed of the wind speed. For example, the wind speed of 5m/s can generate nearly twice more electricity (energy) than that of the wind speed of 4m/s.)

( ii ) If the air current is unstable and the turbulence current is serious, the possibility of damage of the wind power generator will be heavier. It is bad (not good) for the generator to operate well and safe in a long time (many years), what's more, the turbulence current will affect the wind power generator to reduce the generated energy directly. The high wind speed area where the turbulence is serious is absolutely not available as the place of installation.

The tower should be higher, because the height from floor is higher, the windspeed will be heavier, and the air current will be more stable. In the flat area, the height of wind power generator should be above 6 meters.

To air current, trees and some buildings will be the barriers (obstacles). Around the obstacles (barriers), there will be a high, wide, slow-moving and inordinate air current zone. We should avoid installing the VAWT in this area.

The data bellowed can be referred to:



( i ) The height of tower should be at least higher 6 meters than the highest barriers(obstacles) that away from generator 150 meters.

( ii ) If we have to install the wind power generator near the barrier, the height of tower at least twice than height of barrier ,while the height of tower should be less than 12 meters.

ii According to the specific conditions, the directions of foundation construction:

If the foundation is hard rock formation, the ground should be leveled off.

If the foundation is soft rock formation,2x2 square meters, the ground should be tamped in order to avoid the foundation sinking.

If the foundation is the soft sand bed, dig a hole(1.5m×1.5m), the depth is 2 meters. On the bottom layer, put clay 300cm in thickness, and then tamp.

### 3. The configuration of generating system

After you buy our wind power generator, you can configure the devices below into generating system, according to your specific condition. Please refer to our suggestion:

The configuration instruction of H series small wind power generator system:

**Controller:** To make sure the wind power generator connect with the controller before setting up the tower, then turn off the controller, make sure the controller in stopped state (put the switch in “**off**” position), after setting up the tower, make sure the controller connect with storage battery correctly and then turn on the controller (put the switch in “**on**” position).

**Controller/inverter:** for the clients who need the alternating current, match 230V(110V) 50Hz (60Hz).

**Cable:** If we take improper wire diameter or the distance between the generator set and storage battery is improper, which will lead to loss the electrical energy.

The minimum wire diameter (cable conductor specification):

The distance between the generator set and storage battery(m)<50 50-100 100-150

### 4. Routine maintenance

The reliability of H series VAWT is very high; there is no need to maintain regularly. But for wind power generator-tower-electric transmission line system, we should check and maintain regularly in order to make the system operate well.

( i ) Check the drag line of tower; If it loosens, we should taut (strain) them in time. Especially in these conditions: in the first three months (after setting up the tower);

after the strong wind.

( ii ) Check the connection point of electric transmission line(fastness or not, corrosion or not).

( iii ) Check and maintain the storage battery regularly according to the normal requirements.

( iv ) Before the extremely atrocious weather (strong wind or typhoon) comes, in order to protect from unexpected things(danger), we should lay the tower down.

### 5.Trouble clearing

The design of H series VAWT is according to the principle of no failure and maintenance-free, so we should install and operate it correctly. If there's something wrong to influence the machine, please refer to the items:





Trouble	Reason	Method
Shake of VAWT	Wire rope is loose; Set bolt of blades is loose; Blade is damaged; Blade is frozen(ice is on surface)	Taut, fastness; Taut, fastness; Change a new one in order to balance; Clear the ice
Unusual noise	Fastening piece is loose; Bearing is damaged; Friction between parts of VAWT;	Lay VAWT down, check the fastening piece; Change a new bearing; Check
Rotor speed is lower	Friction of generator rotor; Generator stator winding short-circuit or output short-circuit; The switch of controller is in "off" position	Change a new bearing; Check the short-circuit part and insulate; The switch of controller is in "on" position
Output voltage is lower	The rotor speed is lower; There is short-circuit in stator winding three phase; Short-circuit in controller; Lower output voltage electric transmission line is longer, the diameter of lead(wire) is thin	Check the reason and restart; Check the short-circuit part and insulate; Change a new one; Shorten the transmission line or make the diameter of lead thick, reduce the loss
Generator alternating current circuitry have no current	Generator alternating broken circuit or fuse fusing current; Output line broken circuit	Check the reason, switch on; Check the broken circuit part and switch on
Generator output alternating current is normal but no direct current	Direct current fusing current; Output line broken circuit; The rectifier in controller is damaged(broken)	Change a new one; Check the broken part and switch on; Change a new one
Output capacity of storage battery is not enough	Output voltage of generator is too lower or has no generating electricity; The wiring terminal of storage battery is acid erosion, the electric conduction is not good; Storage battery lose effectiveness	Check; Clearing the connect parts, make sure connection well and fastening, then daub the barrier cream; Change a new one

## 6. Introduction of VAWT

### i Material introduction


**(1) Wind turbine blades:** We utilize high strength glass fiber reinforced plastic or aluminum alloy to make blades. The wind rotor operate well (stably and quietly). This kind of new aerofoil is elaborately designed by aerodynamic and hydro mechanical specialists (experts). It start-up wind speed (or cut-in wind speed) is very low, and the wind energy (rotor power) coefficient is very high.

**(2) Generator:** It is made up of the superior high strength permanent magnetic material. The volume is small and the weight is light, the generating electricity coefficient is high. The generator specialist (expert) use special electromagnetic technology to make the generator have extremely low start-up drag torque, which can make sure the VAWT start-up in the gentle breeze. The generating electricity coefficient, start-up performance and over speed overload capacity of generator are all in leading position in this field.




(3) **Whole machine:** It is made up of steel precision casting. It is widely used in air temperature: -30°C-60°C, high humidity and salt mist (in some atrocious weather). It has high reliability series small VAWT, whose appearance is beautiful, installation is easy. You can enjoy the clean (green) energy, at the same time, you will see a beautiful scenery.


### 7. Accessory and installation diagram

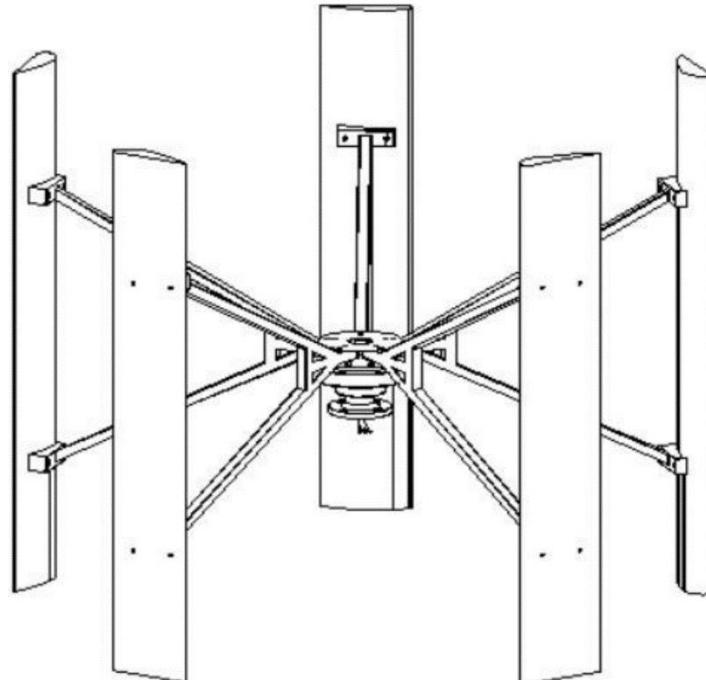


### Parts

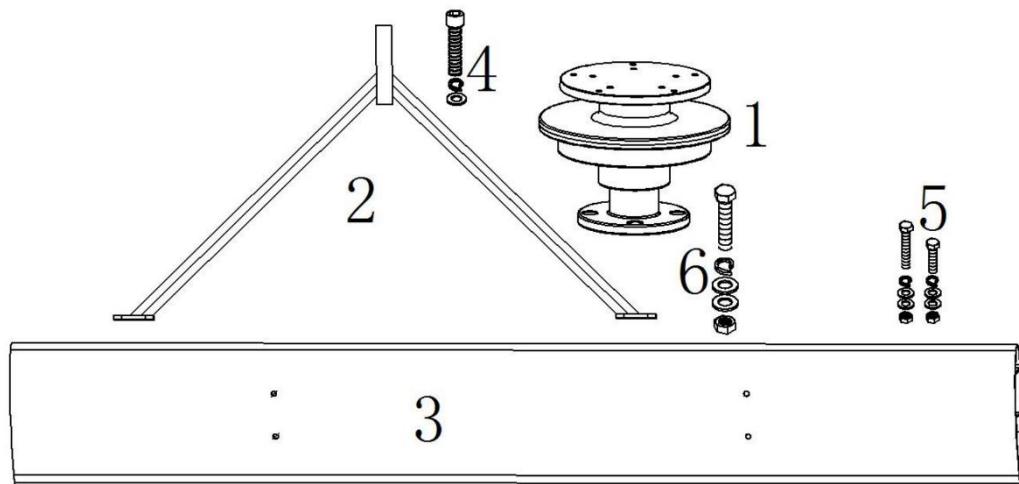

### Wind Turbine Installation

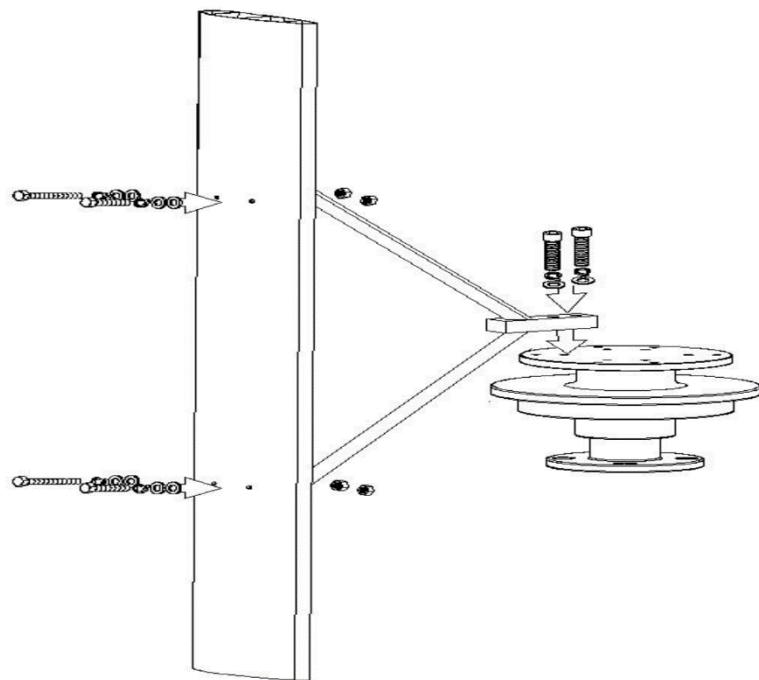

### Guyed cable pole Installation

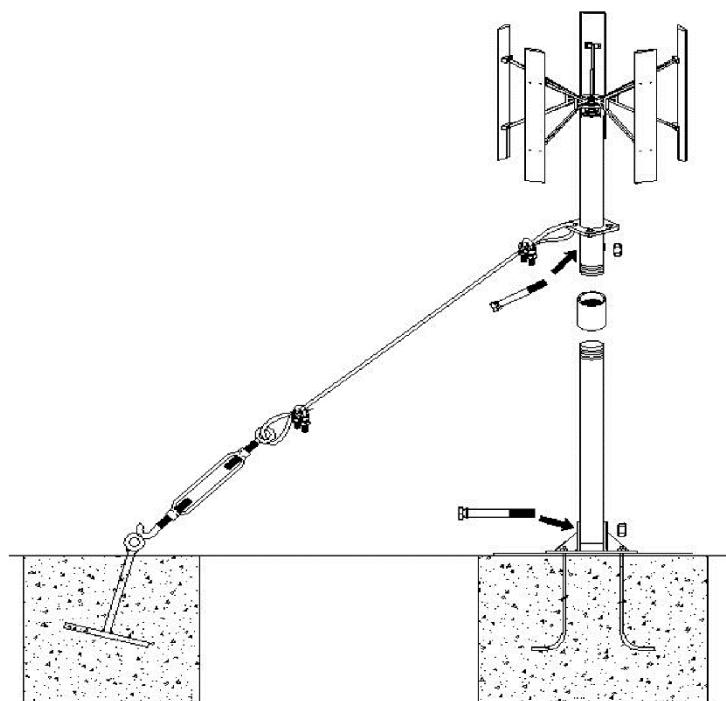




# VerticalWind

## Ficha Técnica

Fully Assembled Wind Turbine

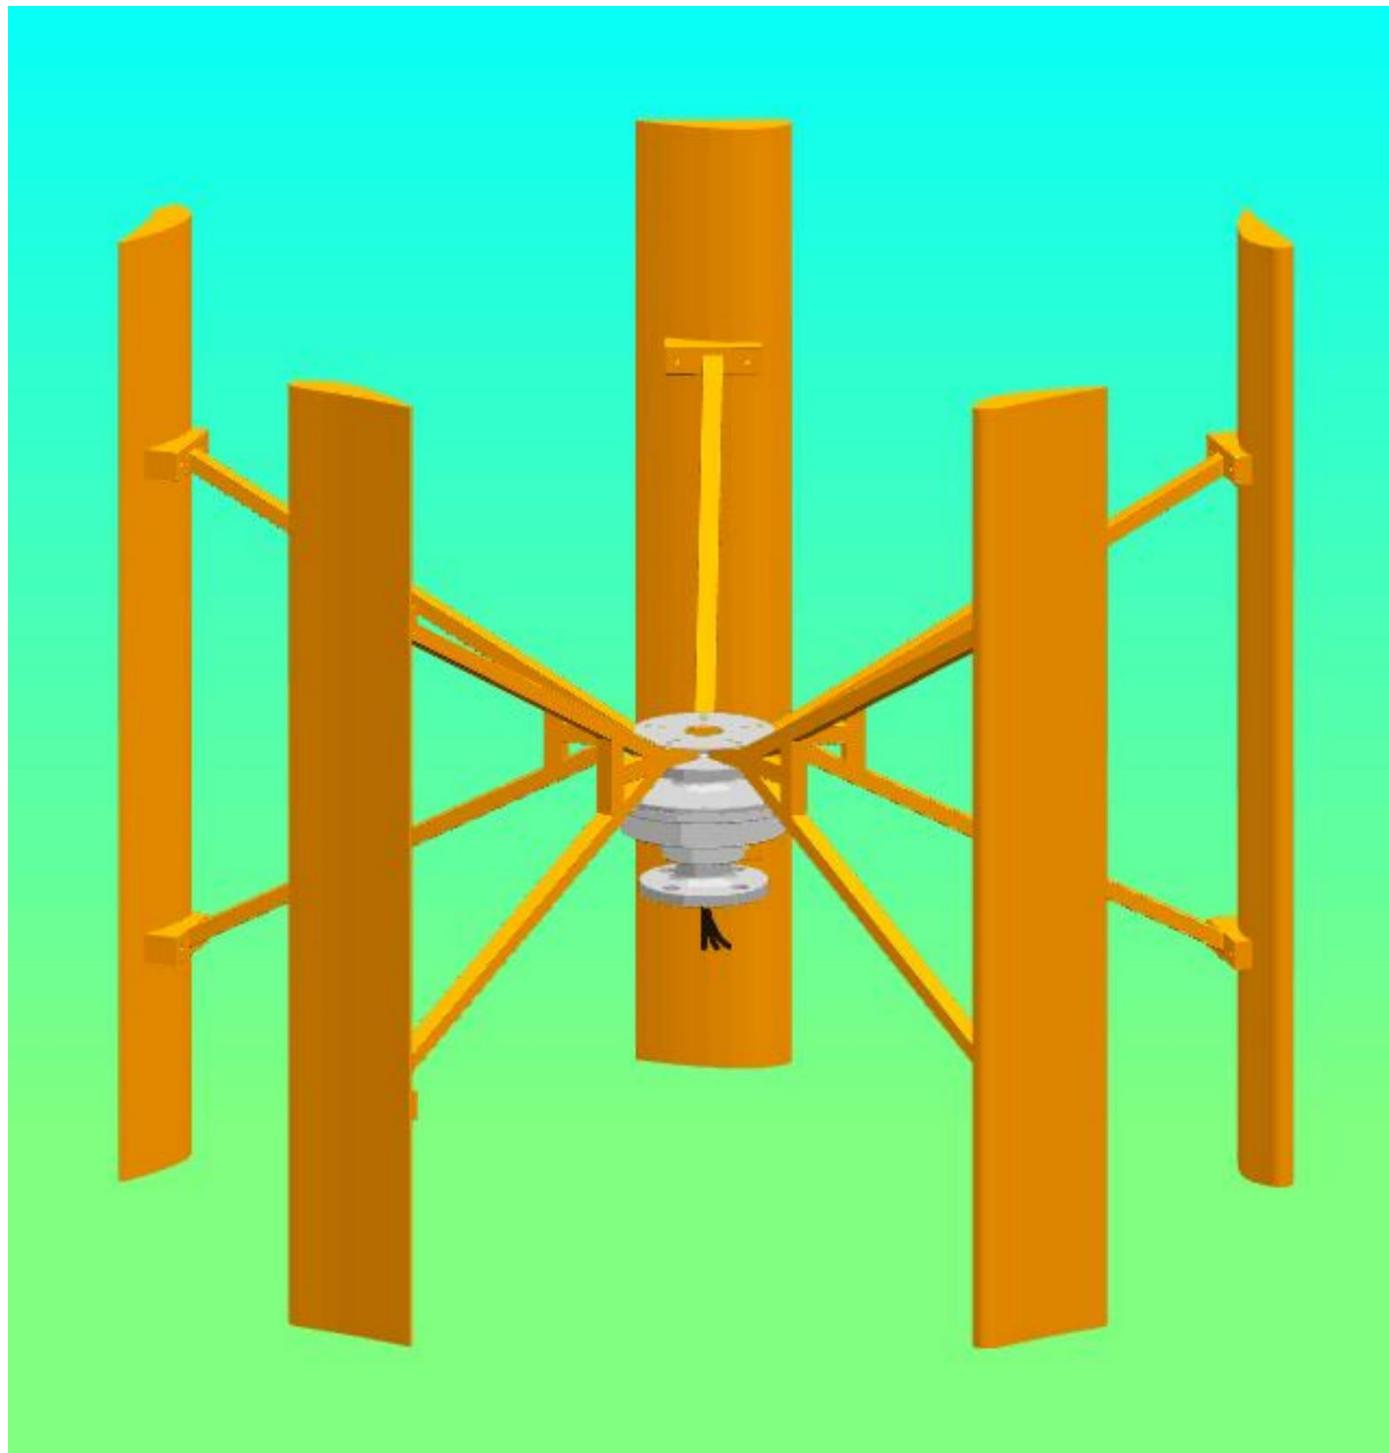

### Wind turbine installation steps

1. Assemble the blade: Align the holes of wind wheel bracket and the blade, cover the bracket bolt with flat washer, then put it through the hole of the wind blade, tighten the nut. So does the other blades
2. The installation sequence of the wind generators can follow the steps as the pictures.
  - 2-1. Place the steel bracket on the ground; block up the flange joint to 1.3m.
  - 2-2. Align the wind generator flange to the tower flange. Cut away insulating layer of current transmission wire end (which are to be connected with controller) for 10mm, then short circuit the exposed copper wires (screwed together).
  - 2-3. Fit the flange bolt with flat washer, make its head above, bolt thread below, put it through the appropriate hole of the flange base. And then connect it to the tower flange, sheath the flat washer, spring washer in the bolt thread, and finally tighten the nut in the flange bolt wire with a wrench. So does the other bolts, flat washers, spring washers, nuts and so on. Tightening force can refer to pic-2.
3. Mount the bracket on the wheel hub, cover it with the clamp, fit the stainless steel bolts with spring washer, flat washer, and then put it through the hole of the hub, tighten the bolts.

### Attention:

- Battery should be connect with controller before wind turbine connected with controller.
- If above started instruction are not followed when assembling and installing the wind turbines, we are sorry that any problem or failure resulted are not to be covered by warranty.

### Off Grid Wind Turbine System for your reference:

For 24V battery bank, connect 2 pieces 12V in series.

For wind solar hybrid controller, connect solar panels with controller together.

