

WorKit

Características Generación Eléctrica: Generador Eólico Vertical WorKit

El WorKit contiene un sistema de control que trabaja por medio de electroimán. Transforma el viento en energía con alta potencia. Se ajusta automáticamente su velocidad y dirección. Su diseño contiene 5 Aspas de aleación de aluminio y fibra de vidrio reforzada además de ser novedoso, compacto, ligero, mayor duración y estabilidad.

El WorKit cuenta factor de protección IP20 además sus componentes de alto grado para garantizar la estabilidad y funcionamiento del producto. Función de protección perfecta por lo que el sistema cuenta con mayor fiabilidad. Ajuste fácil los parámetros desde la pantalla LCD.

El WorKit es un inversor de onda senoidal pura, es un dispositivo inteligente que convierte la energía directa en alterna estable, proporciona una fuente de alimentación efectiva. Es un modelo estético y muy efectivo, además de ser fácil de usar y una pantalla LCD que muestra el voltaje de la batería y otros parámetros de estado y corriente en todo momento.

Aplicaciones de Generación Eléctrica: Generador Eólico Vertical WorKit

El WorKit, es utilizado en semáforos, postes de luz, en jardines, ideal para para Industrias, centros comerciales, residencias, hospitales, escuelas, edificios, restaurantes, hoteles, edificios, oficinas.

Garantía de Generación Eléctrica: Generador Eólico Vertical WorKit

El WorKit, cuenta con 1 año de garantía sujeto a clausulas VentDepot.



10000W
220V/3F/60Hz

Características Técnicas de Generación Eléctrica: Generador Eólico Vertical, WorKit

Clave	Potencia del Generador w	Voltaje de Salida v	Velocidad del Viento Estimado		Velocidad Mínima para Funcionamiento		Velocidad Máxima del Viento		Turbina		Temperatura	Peso Kg	Dimensiones con Empaque de Cartón en cm		
			m/s	km/hr	m/s	km/hr	m/s	km/hr	Diámetro Ø m	Aspas			Ancho	Alto	Largo
MXORK-001	10000	220	11	40	2.5	9	45	162	5.8	5	-40°C a 80°C	450	585	605	585





WorKit


Características Técnicas de Generación Eléctrica: Controlador, WorKit

Clave	Potencia del Controlador en Watts	Voltaje de Entrada V	Voltaje de Salida V	Corriente Nominal de Salida		Frecuencia Hz	Temperatura °C	Peso Kg	Dimensiones con Empaque de Cartón en cm		
				A					Ancho	Alto	Largo
MXORK-001	10	220	220	84		60	20 a 55 °	45	52	43	68



Características Técnicas de Generación Eléctrica: Inversores Off Grid, WorKit

Clave	Potencia del Inversor Kw	Voltaje de Entrada de la Batería V	Voltaje de Salida AC			Temperatura °C	Sistema	Peso Kg	Dimensiones con Empaque de Cartón en cm		
			V	F	Hz				Ancho	Alto	Largo
MXORK-001	10	220	220	1	60	-20 a 55	Off Grid	110	50	50	75

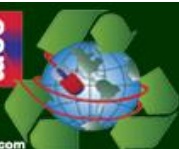



WorKit

Características Técnicas de Generación Eléctrica: Batería, WorKit

Clave	Potencia de la Batería V	Capacidad Nominal Ah	Peso Kg	Dimensiones con empaque de cartón en cm		
				Ancho	Alto	Largo
MXORK-001	24	200	116.4	54	47	27



Características Técnicas de Generación: Torre, WorKit

Clave	Altura de la Torre	Diámetro Nominal del Tubo	Peso
	m	Ø cm	kg
MXORK-001	6	10.95	392






WorKit

Dimensiones de Generación Eléctrica: Generador Eólico Vertical, WorKit

Clave	A	B
	Ø Pulg	Ø Pulg
MXORK-001	1228.35	236.22

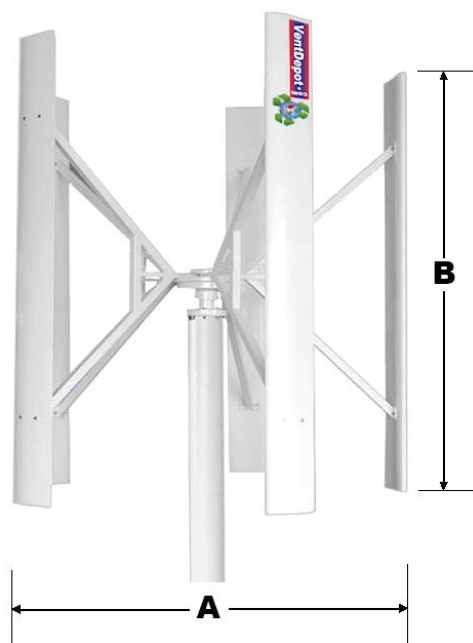

Dimensiones de Generación Eléctrica: Controladores Eólico, WorKit

Clave	A	B	C
	Ø Pulg	Ø Pulg	Ø Pulg
MXORK-001	30	17	44





WorKit


Dimensiones de Generación Eléctrica: Inversores Off Grid, WorKit

Clave	A Ø Pulg	B Ø Pulg	C Ø Pulg
MXORK-001	47	47	73



Dimensiones de Generación Eléctrica: Batería, WorKit

Clave	A cm	B cm	C cm
MXORK-001	52	47	22

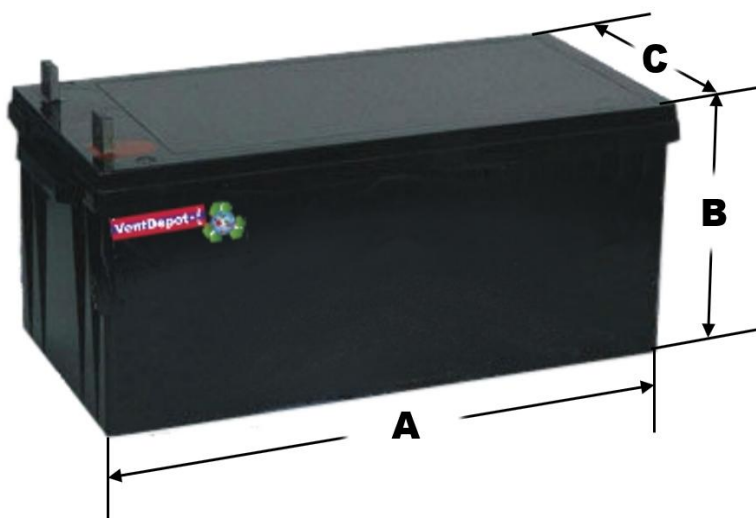





WorKit

Dimensiones de Generación Eléctrica : Torre WorKit

Clave	A	B
	m	Ø cm
MXORK-001	12	13

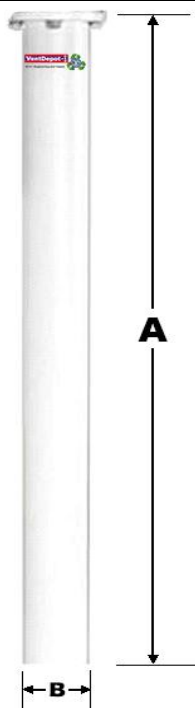

Sistema Off Grid Generación Eléctrica: WorKit

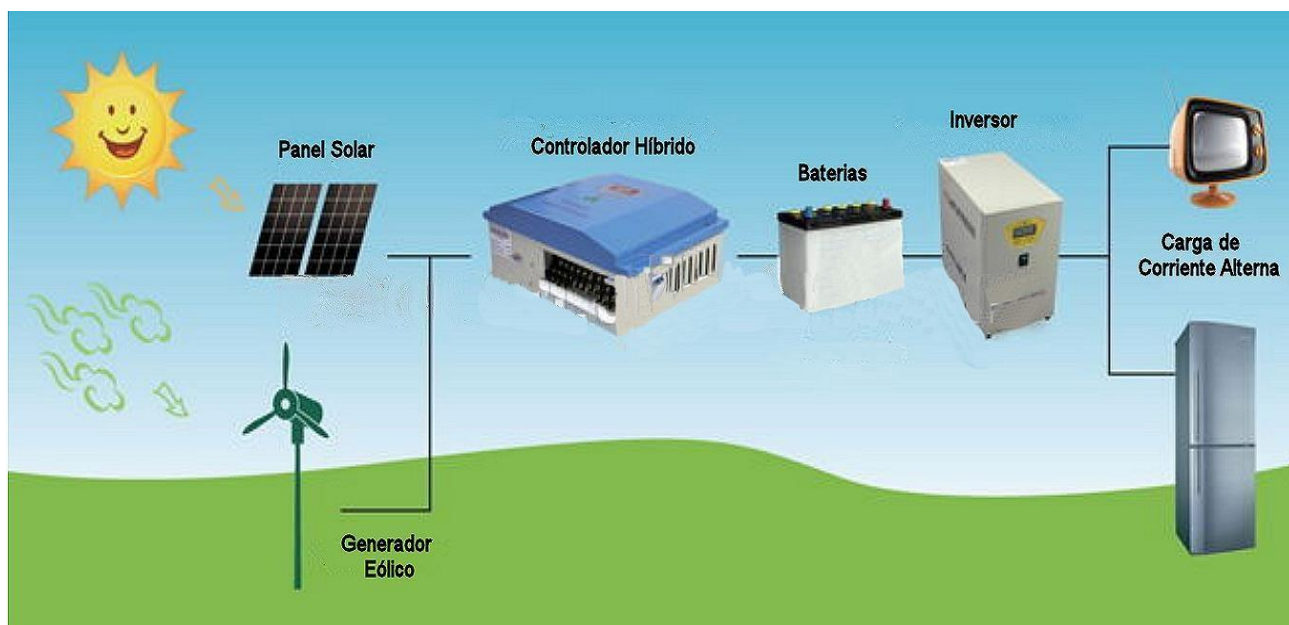

mercado
pago



mercado
libre



WorKit

Aplicaciones de Generación Eléctrica: Generador Eólico Vertical, WorKit






WorKit

User Manual

Vertical axis wind generator

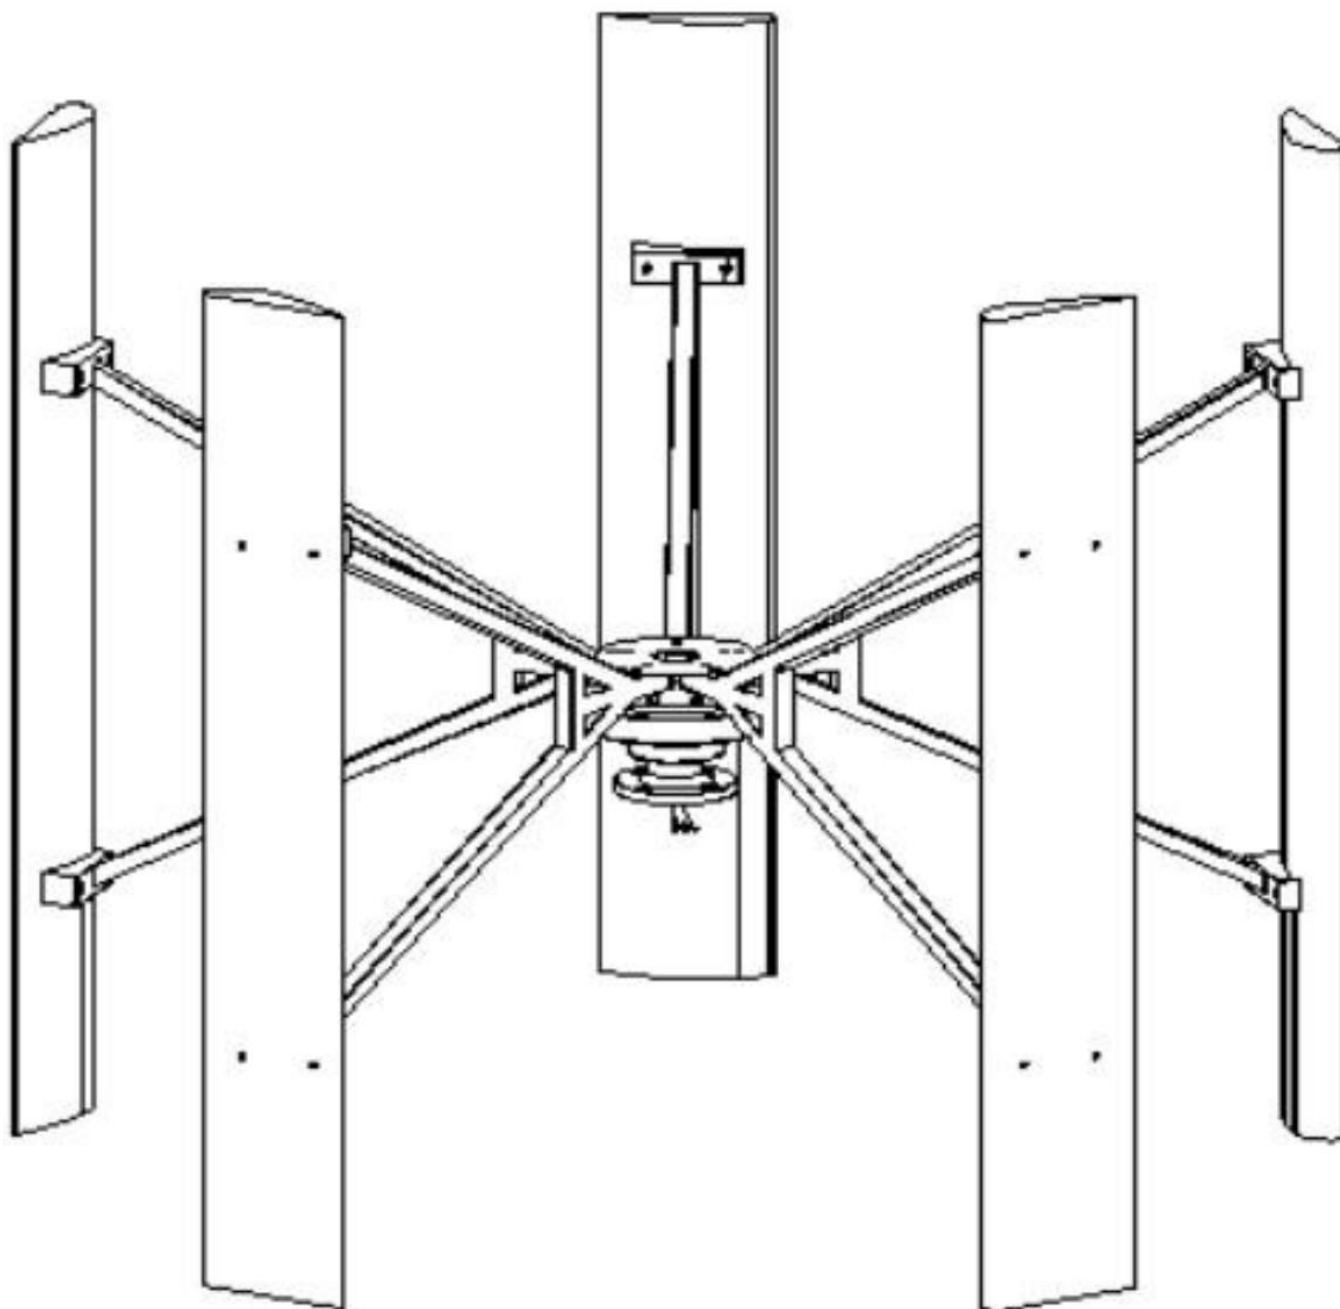

Content

- 1 Overview
- 2 The installation of VAWT
- 3 The configuration of generating system
- 4 Routine maintenance
- 5 Trouble clearing
- 6 Introduction of VAWT
- 7 Accessory and installation diagram

Thank you for your buying our products----vertical axis wind power generator. Please read the manual carefully before you operate the new machine. It is not only good to guarantee the products in safe and normal operation, but also (it is) conducive to bring their advantages into full play. We hope the products----vertical axis wind power generator will make you bright and happy.

1. Overview

VAWT H series wind power generating set utilize a new aerofoil vertical axis windwheel and magnetic suspension structure, choose high strength glass fiber reinforced plastic and aluminum alloy to make blades. This series VAWT have earned many items of national patent, in the leading position. H series VAWT are widely used in the areas where are good environments for wind energy. It can offer the uninterrupted power supply (UPS) for electrical equipment in areas, where are no electricity. It is suitable for off-grid system and on-grid system.

2. The installation of VAWT

i The place (of installation):

The place is very important for generated energy and safe in operation (the reference is below):

A good place should meet with two basic requirements: the higher average windspeed and the weaker turbulence.

(i) The average wind speed is higher, the generated power is higher and the generator will generate more electricity. (The wind energy is proportional to three cubed of the wind speed. For example, the wind speed of 5m/s can generate nearly twice more electricity (energy) than that of the wind speed of 4m/s.)

(ii) If the air current is unstable and the turbulence current is serious, the possibility of damage of the wind power generator will be heavier. It is bad (not good) for the generator to operate well and safe in a long time (many years), what's more, the turbulence current will affect the wind power generator to reduce the generated energy directly. The high wind speed area where the turbulence is serious is absolutely not available as the place of installation.

The tower should be higher, because the height from floor is higher, the windspeed will be heavier, and the air current will be more stable. In the flat area, the height of wind power generator should be above 6 meters.

To air current, trees and some buildings will be the barriers (obstacles). Around the obstacles (barriers), there will be a high, wide, slow-moving and inordinate air current zone. We should avoid installing the VAWT in this area.

The data bellowed can be referred to:

- (i) The height of tower should be at least higher 6 meters than the highest barriers(obstacles) that away from generator 150 meters.
- (ii) If we have to install the wind power generator near the barrier, the height of tower at least twice than height of barrier ,while the height of tower should be less than 12 meters.
- ii According to the specific conditions, the directions of foundation construction:

If the foundation is hard rock formation, the ground should be leveled off.

If the foundation is soft rock formation, 2x2 square meters, the ground should be tamped in order to avoid the foundation sinking.

If the foundation is the soft sand bed, dig a hole(1.5m×1.5m), the depth is 2 meters. On the bottom layer, put clay 300cm in thickness, and then tamp.

3. The configuration of generating system

After you buy our wind power generator, you can configure the devices below into generating system, according to your specific condition. Please refer to our suggestion:

The configuration instruction of H series small wind power generator system:

Controller: To make sure the wind power generator connect with the controller before setting up the tower, then turn off the controller, make sure the controller in stopped state (put the switch in “**off**” position), after setting up the tower, make sure the controller connect with storage battery correctly and then turn on the controller (put the switch in “**on**” position).

Controller/inverter: for the clients who need the alternating current, match 230V(110V) 50Hz (60Hz).

Cable: If we take improper wire diameter or the distance between the generator set and storage battery is improper, which will lead to loss the electrical energy.

The minimum wire diameter (cable conductor specification):

The distance between the generator set and storage battery(m) < 50 50-100 100-150

4. Routine maintenance

The reliability of H series VAWT is very high; there is no need to maintain regularly. But for wind power generator-tower-electric transmission line system, we should check and maintain regularly in order to make the system operate well.

- (i) Check the drag line of tower; If it loosens, we should taut (strain) them in time. Especially in these conditions: in the first three months (after setting up the tower); after the strong wind.
- (ii) Check the connection point of electric transmission line(fastness or not, corrosion or not).
- (iii) Check and maintain the storage battery regularly according to the normal requirements.
- (iv) Before the extremely atrocious weather (strong wind or typhoon) comes, in order to protect from unexpected things(danger), we should lay the tower down.

5. Trouble clearing

The design of H series VAWT is according to the principle of no failure and maintenance-free, so we should install and operate it correctly. If there's something wrong to influence the machine, please refer to the items:



WorKit

Trouble	Reason	Method
Shake of VAWT	Wire rope is loose; Set bolt of blades is loose; Blade is damaged; Blade is frozen(ice is on surface)	Taut, fastness; Taut, fastness; Change a new one in order to balance; Clear the ice
Unusual noise	Fastening piece is loose; Bearing is damaged; Friction between parts of VAWT;	Lay VAWT down, check the fastening piece; Change a new bearing; Check
Rotor speed is lower	Friction of generator rotor; Generator stator winding short-circuit or output short-circuit; The switch of controller is in "off" position	Change a new bearing; Check the short-circuit part and insulate; The switch of controller is in "on" position
Output voltage is lower	The rotor speed is lower; There is short-circuit in stator winding three phase; Short-circuit in controller; Lower output voltage electric transmission line is longer, the diameter of lead(wire) is thin	Check the reason and restart; Check the short-circuit part and insulate; Change a new one; Shorten the transmission line or make the diameter of lead thick, reduce the loss
Generator alternating current circuitry have no current	Generator alternating broken circuit or fuse fusing current; Output line broken circuit	Check the reason, switch on; Check the broken circuit part and switch on
Generator output alternating current is normal but no direct current	Direct current fusing current; Output line broken circuit; The rectifier in controller is damaged(broken)	Change a new one; Check the broken part and switch on; Change a new one
Output capacity of storage battery is not enough	Output voltage of generator is too lower or has no generating electricity; The wiring terminal of storage battery is acid erosion, the electric conduction is not good; Storage battery lose effectiveness	Check; Clearing the connect parts, make sure connection well and fastening, then daub the barrier cream; Change a new one

6. Introduction of VAWT

i Material introduction

(1) Wind turbine blades: We utilize high strength glass fiber reinforced plastic or aluminum alloy to make blades. The wind rotor operate well (stably and quietly). This kind of new aerofoil is elaborately designed by aerodynamic and hydro mechanical specialists (experts). Its start-up wind speed (or cut-in wind speed) is very low, and the wind energy (rotor power) coefficient is very high.


(2) Generator: It is made up of the superior high strength permanent magnetic material. The volume is small and the weight is light, the generating electricity coefficient is high. The generator specialist (expert) use special electromagnetic technology to make the generator have extremely low start-up drag torque, which can make sure the VAWT start-up in the gentle breeze. The generating electricity coefficient, start-up performance and over speed overload capacity of generator are all in leading position in this field.






(3) **Whole machine:** It is made up of steel precision casting. It is widely used in air temperature: -30°C-60°C, high humidity and salt mist (in some atrocious weather). It has high reliability series small VAWT, whose appearance is beautiful, installation is easy. You can enjoy the clean (green) energy, at the same time, you will see a beautiful scenery.

7. Accessory and installation diagram

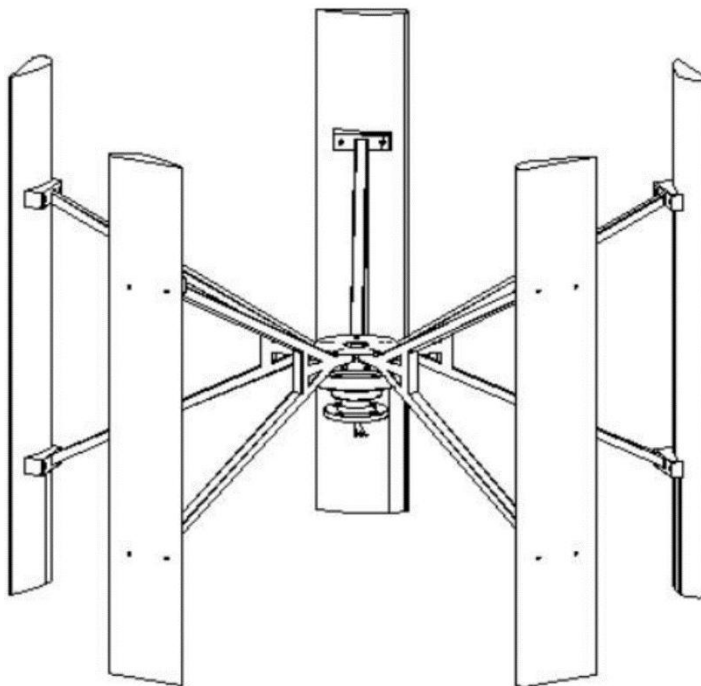


Parts

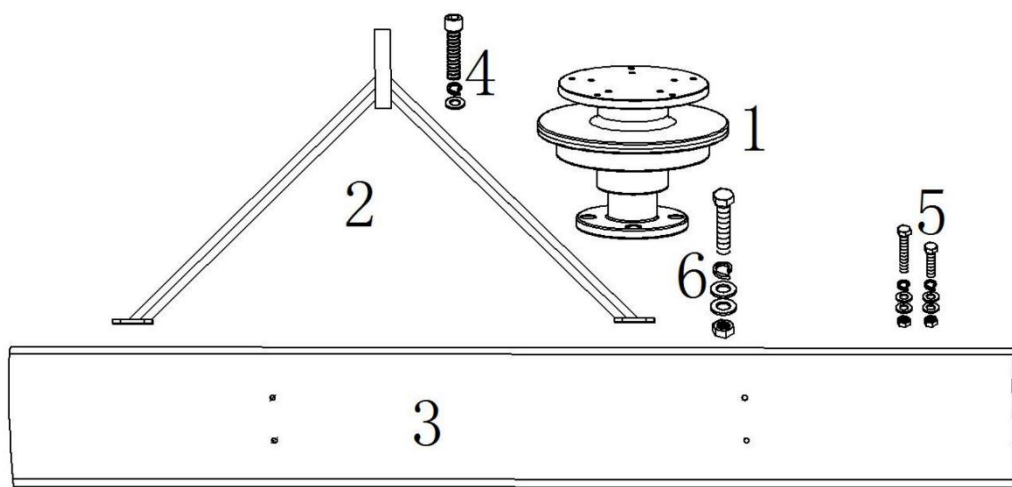




Wind Turbine Installation

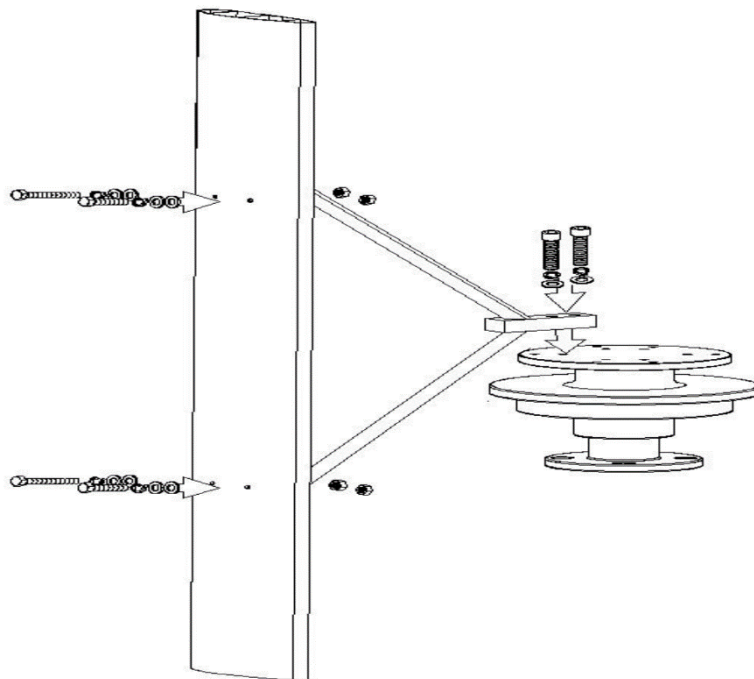


Guyed cable pole Installation

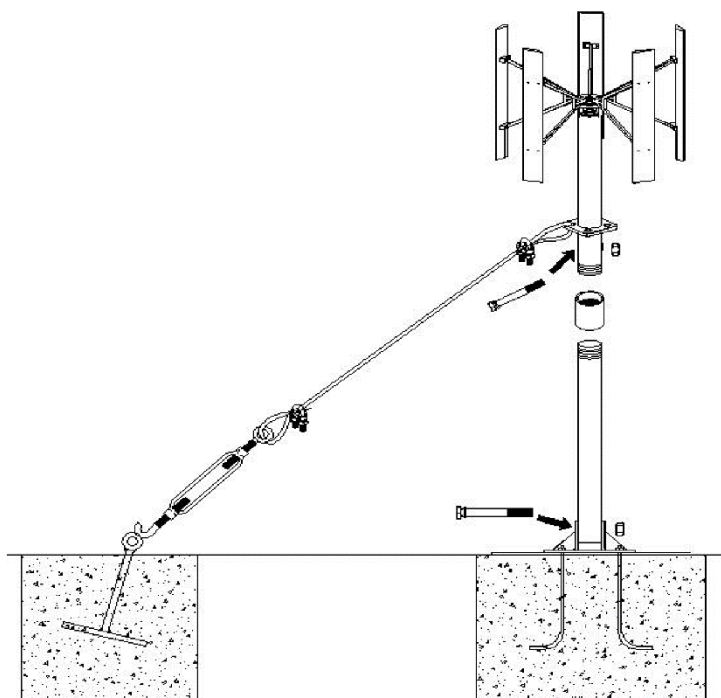



WorKit

Fully Assembled Wind Turbine

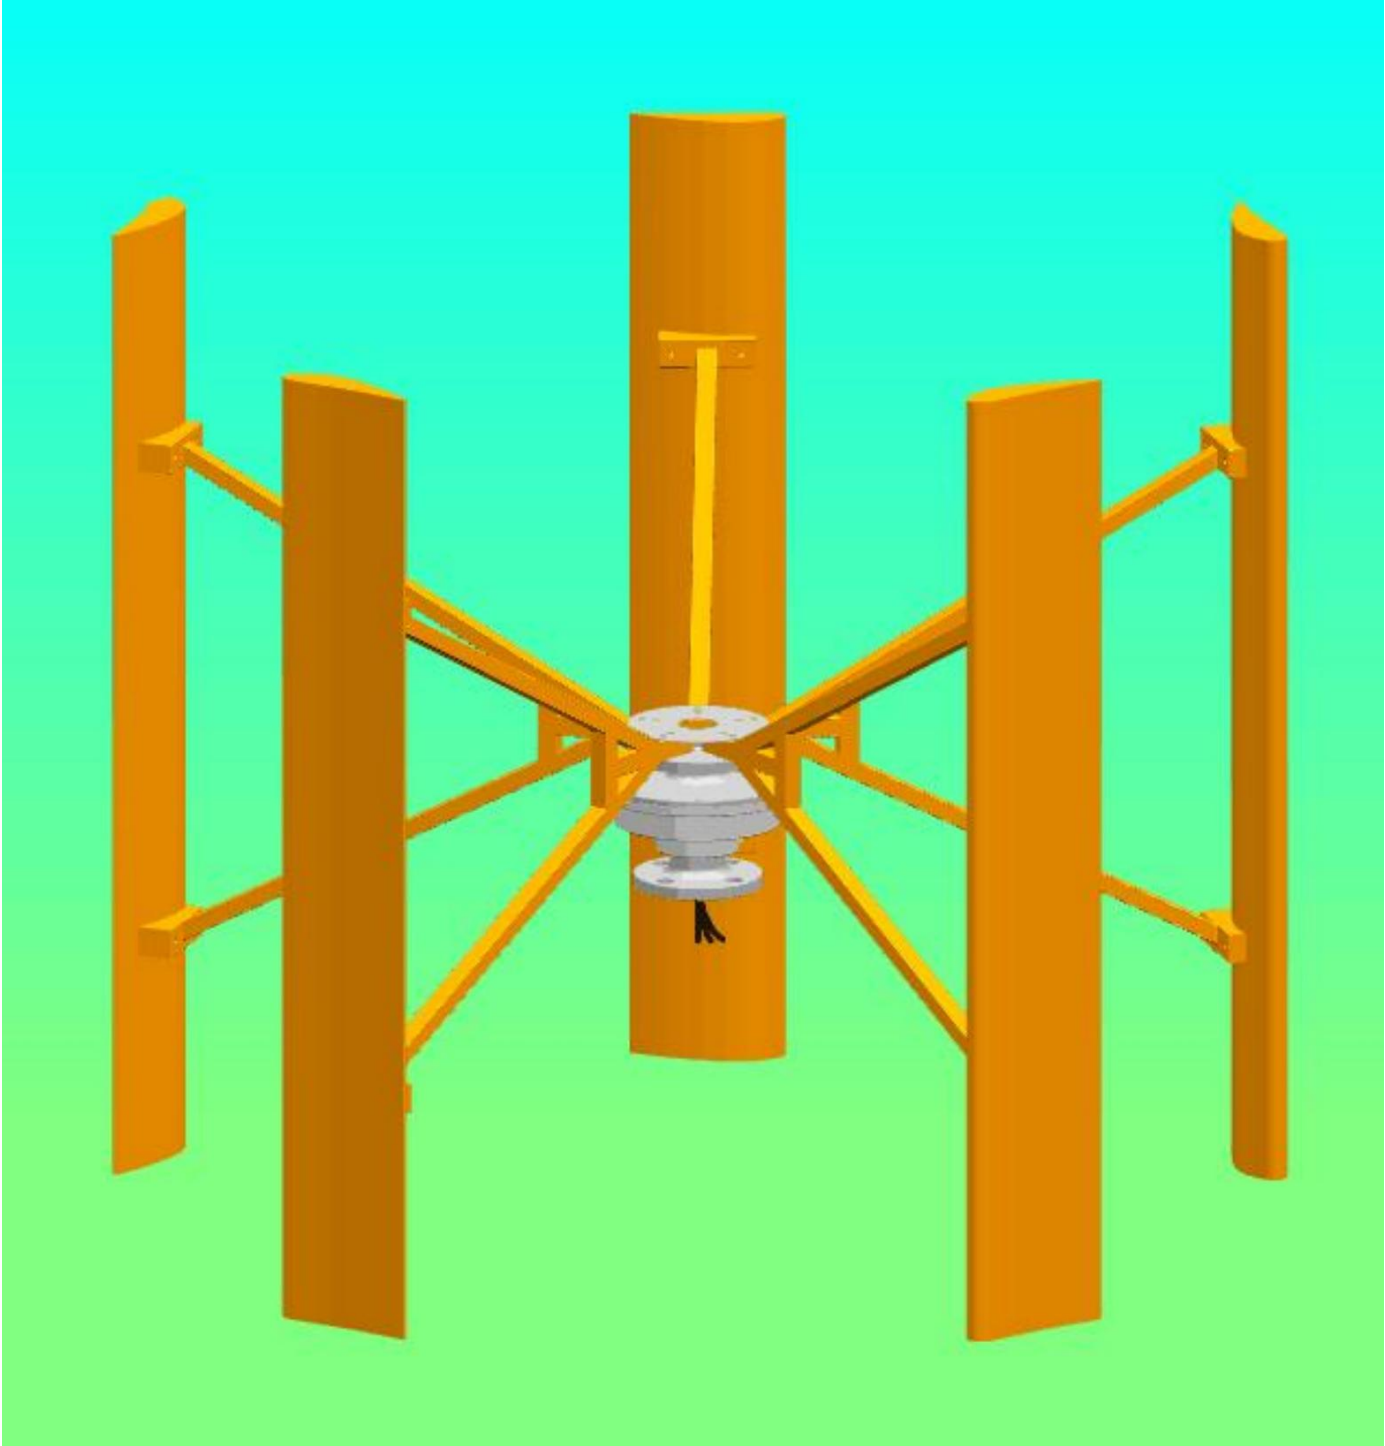



Wind turbine installation steps

1. Assemble the blade: Align the holes of wind wheel bracket and the blade, cover the bracket bolt with flat washer, then put it through the hole of the wind blade, tighten the nut. So does the other blades
2. The installation sequence of the wind generators can follow the steps as the pictures.
 - 2-1. Place the steel bracket on the ground; block up the flange joint to 1.3m.
 - 2-2. Align the wind generator flange to the tower flange. Cut away insulating layer of current transmission wire end (which are to be connected with controller) for 10mm, then short circuit the exposed copper wires (screwed together).
 - 2-3. Fit the flange bolt with flat washer, make its head above, bolt thread below, put it through the appropriate hole of the flange base. And then connect it to the tower flange, sheath the flat washer, spring washer in the bolt thread, and finally tighten the nut in the flange bolt wire with a wrench. So does the other bolts, flat washers, spring washers, nuts and so on. Tightening force can refer to pic-2.
3. Mount the bracket on the wheel hub, cover it with the clamp, fit the stainless steel bolts with spring washer, flat washer, and then put it through the hole of the hub, tighten the bolts.

Attention:

- Battery should be connect with controller before wind turbine connected with controller.
- If above started instruction are not followed when assembling and installing the wind turbines, we are sorry that any problem or failure resulted are not to be covered by warranty.

Off Grid Wind Turbine System for your reference:

For 24V battery bank, connect 2 pieces 12V in series.

For wind solar hybrid controller, connect solar panels with controller together.

